



- LA Flash: Remote access is in progress
- LX Steadily ON: Indicate the current volume level where X is from 1 to 8 (non-cyclic)
- 14. Press to turn on the answering machine
Press again to turn off the answering machine
- 15. Press to play the message
Press again to stop the message playback
- 16. Press to skip the current message and play the next message
- 17. Press once to delete the message during playback
Press and hold to delete all the messages
Note: New voice messages will not be deleted
- 18. Press to repeat playing the current message from the beginning
Press twice to skip backward to the previous message
- 19. Decrease (-) speaker volume during message playback

*Subject to subscription and availability of the service from the fixed line operator.

ENGLISH

BEFORE 1st USE

Connecting your phone:

- Connect plugs in corresponding sockets in the base station. Plug the telephone line into telephone socket and insert power plug in an electrical outlet.
- Insert batteries in Handset

Before you start to use your telephone, charge batteries continuously for 15 hours.

only use plug adapter supplied with the unit and rechargeable batteries with your phone.

Handset / Base Station Keys

1. **OK/Menu key**
2. **Back/Mute/Intercom key**
- 3 & 4. **Navigation key**
5. **Hang-up/Exit key**
6. **Recall (Flash) key** - To access to operator services*
7. **Phonebook key**
8. **key***
* To block calls, it is necessary to subscribe to the Calling Number Presentation service. Contact your landline operator.
In standby mode: Direct access to the Call blocking menu
9. **Star key** - To toggle between the external and internal calls
10. **Talk key / During a call:** press to activate / deactivate handsfree.
11. **Paging key** - To locate handset / to start registration procedure. When multiple handsets are delivered, they are pre-registered on the base station. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.
12. Increase (+) speaker volume during message playback.
13. **7-SEG LED DISPLAY**
0F-> -- When answering machine is OFF
0n-> XX When answering machine is ON where XX is number of messages in TAM memory
00 Steadily ON: No voice messages in TAM
XX Flash: There are XX new voice messages received where XX is from 01 to 59
ZZ Steadily ON: There are ZZ old voice messages kept in the TAM memory (no new voice messages)
XX/FF Flash XX alternatively with FF: There are XX new voice messages received where XX is from 01 to 59 and the TAM memory is full
FF Flash FF: TAM memory is full and there are no new messages, only old messages are kept in TAM memory
- /XX Flash XX alternatively with - -: Time is not set and there are XX new voice messages received where XX is from 01 to 59
- - -Flash - -: Time is not set and there are old voice messages kept in the TAM memory only (no new voice messages)
XX Steadily ON: Playing the current XX incoming old message
Flash: Playing the current XX incoming new message
A1/A2 Steadily ON: Playing the current outgoing message (OGM) where A1 is the Answer & Record OGM and A2 is the Answer Only OGM
Flash XX alternatively with An: XX new incoming message is now recording. An denotes that the incoming message recording is in progress
XX/An

Display icons

- Indicates that the Call Blocking function is activated. (See the attached Call Blocking addendum)
- Indicates battery is fully charged.
- Indicates battery is fully discharged.
- Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.
- Indicates you have a new voice mail message*.
- Indicates you have new missed calls*.
- Displays when the alarm clock is activated.
- Displays when handsfree is activated.
- Indicate when the telephone answering machine (TAM) is turned on. Flash when new TAM messages are received.
- Displays when ringer volume is turned off.
- Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.
- Indicates when more characters are existed after the text currently displayed.

Set language and flashtime to operate correctly on your network:

- / or select **REGL. COMB** / / or select **LANGUE** / / or select your desired language / / .
- / or select **BS SETTINGS** / / or select **FLASH TIME** / / or select **SHORT / MEDIUM** or **LONG** / / .

Using the phone

Receive and end a call

- /
- either before or after dialing your number
- From redial list: / or / .
- From call log list*: / or / .

Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.

- From direct memories: long press on **KEY 1** or **KEY 2** or **KEY 3** in idle mode.
- From phonebook: / or / .
- To activate/dsactivate handsfree: .

To make an internal call

- If only 2 registered handsets: / .
- If more than 2 registered handsets: / or / select handset number / .

To make a three-party conference call:

- During call:
- Press / select **INTERCOM** / / enter handset number.
 - Press on the called handset to answer.
 - Long press on the calling handset to establish conference call.

Flashbook settings: 50 entries

To register in phonebook

- / or to select **PHONEBOOK** / / / select **ADD** / enter name of contact / / / enter number of contact / / select melody / / .

To register the direct memories in keys 1, 2 & 3

- / or select **HS SETTINGS** / / or select **DIRECT MEM** / / or select **KEY 1** or **KEY 2** or **KEY 3** / / edit or enter the number / / .

General settings

- This phone can be customized according to your preferences, to access the different possibilities press: .
- To customize handset (name, melody, language,...): or select **HS SETTINGS** / / .
- To change PIN, registration handset, reset: or select **BS SETTINGS** / / .

Answering machine setting

Answering machine operation by handset

Turn the answering machine on or off

- / or to select **ANS. MACHINE** / / or or to select **TAM ON/OFF** / / or to select **ON** or **OFF** / / .

Set the answer mode

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / to select **ANSWER MODE** / / or or to select **ANSWER ONLY** or **ANS & REC** / / .

Record a personalised outgoing message

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / to select **OGM SETTINGS** / / or or to select **RECORD MESS** / / to start recording / to end recording.

Playback and delete messages

- / or to select **ANS. MACHINE** / / to select **MSG PLAYBACK** / / to start playback.
- During message playback you can press then or to select options to DELETE the current message.

Set ring delay

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / to select **ANSWER DELAY** / or or to select **2 -8 RINGS** or **TIME SAVER** / / .

To check messages remotely

- Dial your home phone number / while the answering machine playing greeting message, press and enter remote access code (master PIN code 0000).

The remote feature lets you perform the following functions:

To	Press this button
Play back messages	5
Repeat message	4
Erase message	2 (during message playback)
Skip message	6
Turn on answerer	7
Turn off answerer	9

Set the OGM voice language

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / or to select **TAM LANGUAGE** / / or to select your preferred language / / .

TROUBLESHOOTING

As a general rule, if a problem occurs, remove the batteries from all handsets for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries. For more information, you can download full user guide or get on-line assistance www.alcatel-home.com

SAFETY

This telephone is not designed for Emergency calls when the main power fails. Do not use your telephone to notify a gas leak or other potential explosion hazard. Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances. Your telephone must be located in a dry place away from hot, humid and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

Help us protect the environment in which we live!

CONFORMITY

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.alcatel-home.com

Average power per channel: 10mW
Maximum Output Power (NTP) : 24dBm
Frequency Range : 1880-1900MHz

ATLINKS Europe
147 avenue Paul Doumer 92500 RUEIL-MALMAISON - France
www.alcatel-home.com

Alcatel is a trademark of Nokia, used under license by ATLINKS